


AGES 7 AND UP

 **WARNING:**
CHOKING HAZARD—Small parts.
Not for children under 3 years.

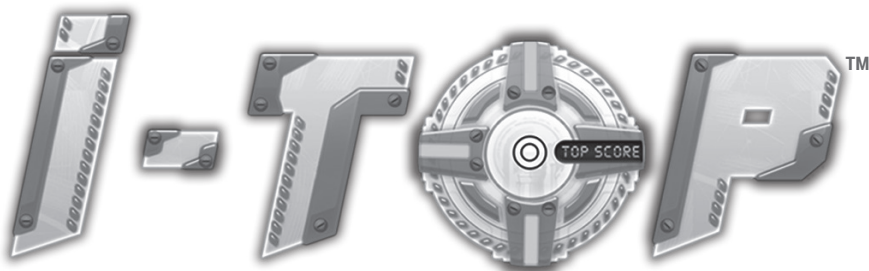

i-Top™ is an incredibly sophisticated, spinning top that can keep track of the number of spins spun.

INSTRUCTIONS

TOP SCORE:

When you spin your i-Top™, you will see numbers scrolling along the top. This is your i-Top™ counting the total number of spins.

Improve your throws and try new techniques to become unbeatable!

As well as the number of spins, two messages are displayed—“**LAST**” and “**HIGH.**”

LAST: Shows your previous score (example—LAST: 171).

HIGH: Shows the highest score obtained in one spin (example—HIGH: 717).

THE "99" CHALLENGE:

Spin your i-Top™ and grab it when it reaches **exactly** 99 spins. If you succeed, you will unlock a secret animation and win a star that will be displayed each time you spin your i-Top™ (example: 3★).

Win the “99” Challenge **several times, in-a-row** to increase your number of stars!

COMPASS MODE:

Spin your top **right-left-right-left** successively, without ever exceeding 30 turns, to unlock the compass mode that shows you north, south, east and west... You'll never get lost again!

HIDDEN MODES:

Want more cool animations? Try to get these exact scores to unlock these animations:

- 214 (Cupid)
- 314 (Pi)
- 333 (Diamonds)
- 606 (UFO)
- 747 (Plane)
- 777 (Jackpot)
- 888 (Lucky Charm)

and more!


CHANGING BATTERY:

When you want to reset your i-Top™, you can push down the RESET button with a paperclip tip.

2 Phillips/cross head screwdriver (not included) required for battery replacement. Alkaline batteries recommended.

WARNING:
This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are only to be charged under adult supervision
- Rechargeable batteries are to be removed from the toy before being charged

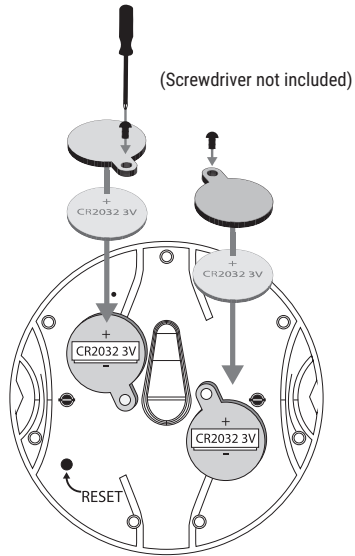

- Different types of batteries or new and used batteries are not to be mixed
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

We appreciate your comments on this game. Please send your correspondence to: info@goliathgames.com
Our Customer Service Department can be reached Monday through Friday (except holidays) from 10:00 am CST to 4:00 pm CST at 855-258-8214.



© 2018 Goliath BV, Vijzelpad 80, NL 8051 KR Hattem. © 2018 Goliath Games, LLC, 3701 West Plano Parkway, Suite 100, Plano, TX 75075, USA. Warning: Not suitable for children under three years old due to small parts. Choking hazard. Keep this information for future reference. Colors and contents may vary from those illustrated. Made in Guangdong, China. www.goliathgames.us



Distributed under license in Australia by Crown & Andrews Pty Ltd, Unit D, 21 Loyalty Road, North Rocks, NSW 2151, Australia. P: +61 2 98983555 E: sales@crowinandandrews.com.au
www.crowinandandrews.com

© 2016 Nextoy LLC and Doo-Bee Toys and Games Ltd. Made Under License from Nextoy LLC and Doo-Bee Toys and Games Ltd.